



## User Permissions




	Administrator	Power User	Everyday	Reporter	Spectator	Compliance	Dispatcher	Driver
Dashboard	•	•	•					
My Assets	•	•	•					
Spectate	•	•	•		•			
Reporting	•	•	•	•				
Driver Behaviour	•	•	•					
Fleet Management	•	•				•		
Job Management	•	•					•	
Geofences	•	•	•					
Administration control	•							
Messaging	•	•					•	
Driver App								•
Fleet Managers App	•	•	•	•	•	•	•	
Users & Drivers	•							
Order New Hardware	•	•						
Check sheet	•	•	•			•		•
Notifications	•	•	•	•	•		•	
Instant Driver Feedback								•
User Activity Oversight (Omni only)	•							

When new users are set up in the Argus Hub, each user is assigned a user profile. The different user profiles give users access to different features and can limit what functionality they have access to.


You can choose from the pre-loaded user profiles shown below or create your own custom profile.

---


 **Administrator:** An Administrator has access to everything. It is the only profile with access to administration control and account information. This profile is for the account holder/business owner. An administrator is the only user profile that can set up and add new users and drivers to the Argus Tracking system. They can order new GPS hardware or arrange hardware installs or removals through the account portal. On the Omni plan, an administrator has user activity oversight so can view the last time a user logged in to the Argus Hub.

An administrator cannot be locked to a group. For the ability to lock the user to only have access to a certain group, set them up as one of the user profiles below:


---

 **Power User:** A Power User has access to everything but without administration control. They cannot set up new users and drivers, but they can order new GPS hardware and arrange hardware installs or removals through the account portal.


---

 **Everyday:** An Everyday user is the most common - it gives users access to the dashboard, profiles and reporting, without fleet or job management.


---

 **Reporter:** A Reporter only has access to Reports and Driver Behaviour.


---

 **Spectator:** A Spectator can only view Spectate to see where a vehicle is at that moment on a map. This profile is handy for the office to use to keep track of where a vehicle is at that moment ie to dispatch the closest person for the job. They can also run a quick Stop Report on the previous 24 hours of any vehicle they have access to.


---

 **Compliance:** Compliance gives a user access to profiles and the fleet management suite. This is useful for mechanics to keep track of vehicles' maintenance.

---

 **Dispatcher:** A Dispatcher can see My Assets and Job Management. This profile is for job management - dispatch the next job with the job address.

---

 **Driver:** A Driver has access to the Argus Android and iOS apps, to receive notifications like overspeed, geofence speed, Geofence notifications on their mobile devices for "Instant Driver Feedback". The Driver is also able to undertake checksheets from both Android and iOS devices. This profile is designed for drivers who have their own dedicated vehicle, not a pool vehicle. A Driver does not have access to the Argus Tracking software, only the Driver App.

---